



PT3270Q  
Touch LED LCD Monitor

USER'S GUIDE

[www.planar.com](http://www.planar.com)

This document may not be copied in any form without permission from Planar. Information in this document is subject to change without notice.

## **Trademark Credits**

Windows™ is a trademark of Microsoft Corp

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other companies are trademarks or registered trademarks of their respective companies.

## **Disclaimer**

The information contained in this document is subject to change without notice. Planar Systems, Inc. makes no warranty of any kind with regard to this material. While every precaution has been taken in the preparation of this manual, the Company shall not be liable for errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

# Content

Operation Instructions .....	1
Unpacking Instructions .....	3
Safety Precautions .....	3
Consignes de sécurité .....	4
Package Overview .....	5
Front View of the Product.....	6
Rear View of the Product .....	7
Quick Installation.....	8
Basic Operation .....	9
OSD Menu .....	11
Supporting Timing Modes .....	17
Technical Information .....	18
Wall Mount Instructions .....	19
Care and Maintenance Wall .....	20
Troubleshooting .....	20
Planar Support .....	21

# Operation Instructions

Thank you for purchasing the PT3270Q monitor. Please read this guide thoroughly before installation.

## FCC RADIO FREQUENCY INTERFERENCE STATEMENT

### WARNING: (FOR FCC CERTIFIED MODELS)

This LED LCD Monitor has been tested and found compliant with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide proper protection against harmful interference to a residential installation. This Touch LED LCD Monitor generates, uses, and can radiate radio frequency energy. Harmful interference to radio communication may be the result if it's not properly installed and used. However, there is no guarantee that interference will not occur in a particular installation. If this Touch LED LCD Monitor does cause serious interference to radio or television reception, resetting may correct it. Moreover, users are encouraged to reduce interference by doing one or more of the following:

- Reorient or relocate the receiving antenna.
- Move the Touch LED LCD Monitor and the receiver further away from each other.
- Connect the Touch LED LCD Monitor into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local dealer or a qualified technician.

### FCC Warning:

To assure a continued FCC compliance, a user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications to this Touch LED LCD Monitor would void the user's authority to operate this device.

**Note:** If necessary, shielded interface cables and AC power cord must be used to meet the emission level limits.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.



According to WEEE regulation, this Touch LED LCD Monitor can't be handled as normal trash in Europe when it is out of usage. Please refer to the recycle information on Planar's website to handle it.

For more information on how to recycle your product, please visit <http://www.planar.com/about/green/>

## **COMMUNIQUE D'AVERTISSEMENT DE LA FCC CONCERNANT LES INTERFERENCE DE FREQUENCE RADIO: (SEULEMENT POUR MODELES CERTIFIE PAR LA FCC)**

Ce moniteur a été testé et à été trouvé conforme aux limites pour un appareil numérique de Class B, suivant la partie 15 des règlements de la FCC. Ces limites ont été développées pour offrir une protection satisfaisante contre les interférences nuisibles dans une installation résidentielle. Ce moniteur génère, utilise et peut radier de l'énergie de fréquence radio. Ceci peut causer des interférences nuisibles à des communication radio si l' appareil n' est pas convenablement installé et utilisé. Il n'y a néanmoins aucune garantie que des interférences n'apparaîtront pas dans une installation particulière. Si ce moniteur cause de sérieuses interférences à la réception de signaux radios ou télévisées, une possibilité est de réinitialiser le moniteur. Les usagers sont aussi encouragés à corriger les interférences en appliquant une ou plusieurs des démarches suivantes:

- Réorientez ou déplacez l'antenne de réception.
- Placez le moniteur et le récepteur plus loin l'un de l'autre.
- Connectez le moniteur à une prise différente de celle à laquelle le récepteur est connecté.
- Consultez votre revendeur local ou un technicien qualifié.

### **Avertissement de la FCC:**

Pour assurer une conformité continue au règlements de la FCC, l'utilisateur doit utiliser un cordon d'alimentation mis à terre et le câble d'interface vidéo protégé avec noyaux en ferrite, fourni avec l'appareil. Chaque modification ou changement non-autorisé appliqué à ce moniteur peut faire perdre à l'utilisateur son droit d'opération de cet appareil.

**Note:** Si nécessaire, des câbles d'interface protégés et un cordon d'alimentation alternative doivent être utilisé pour être conforme aux limites d'émission.

**Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité aux limites FCC Class B.**

## Unpacking Instructions

- Remove the Touch LED LCD Monitor out of the package and take off EPE Foam.

## Safety Precautions

Follow all warnings, precautions and maintenance as recommended in this user's manual to maximize the life of your unit.

### DO :

- Turn off the product before cleaning.
- Surface may be cleaned using a soft clean cloth moistened with mild window glass commercial cleaners or 50/50 mixture of water and isopropyl alcohol.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Disconnect the power plug from AC outlet if the product is not going to be used for an extended period of time.

### Don't :

- Do not touch the LED display screen surface with sharp or hard objects.
- Do not use abrasive cleaners, waxes or solvents for your cleaning.
- Do not operate the product under the following conditions:
  - Over 16 hours per day.
  - Extremely hot, cold or humid environment.
  - Areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.
- If smoke, abnormal noise or odor emits from your Touch LED LCD Monitor, remove the power cord immediately and call your service center.
- Never remove the rear cover of your Touch LED LCD Monitor. The display unit inside contains high-voltage parts and may cause electric shock.
- Never try to repair your Touch LED LCD Monitor yourself. Always call your service center or a qualified technician to fix it.
- Due to safety concerns, if the VESA mounting kit is purchased separately, please make sure the mounting kit is UL-listed, and replaceable only by service personnel.

# Consignes de sécurité

Respectez tous les avertissements, les précautions et conseils d'entretien recommandés dans ce manuel de l'utilisateur pour maximiser la durée de vie de votre appareil.


## A faire:

- Éteindre le produit avant de le nettoyer.
- La surface de l'écran tactile peut être nettoyée avec un chiffon doux et propre imprégné d'un nettoyant doux du commerce pour vitres ou d'un mélange à 50/50 d'alcool isopropylique et d'eau.
- Utilisez un chiffon doux imprégné d'un détergeant doux pour nettoyer le carter de l'affichage.
- Débranchez la fiche d'alimentation de la prise de courant secteur si le produit ne doit pas être utilisé pendant une période prolongée.


## A ne pas faire:

- Ne touchez pas la surface de l'écran LED avec des objets coupants ou durs.
- N'utilisez pas des produits de nettoyage abrasifs, de la cire ou des solvants pour le nettoyage.
- N'utilisez pas le produit dans les conditions suivantes:
  - Plus de 16 heures par jour.
  - Environnement extrêmement chaud, froid ou humide.
  - Endroits poussiéreux ou sales.
  - Près d'appareils générant un fort champ magnétique.
  - Sous la lumière directe du soleil.
- Si de la fumée, un bruit anormal ou une odeur s'échappait de votre moniteur Toucher LCD LED, débranchez immédiatement le cordon d'alimentation et appelez votre centre de réparation.
- Ne retirez jamais le couvercle arrière de votre moniteur Toucher LCD LED. L'unité d'affichage contient des éléments où circule un voltage élevé et présentant un risque d'électrocution.
- N'essayez jamais de réparer vous-même votre moniteur Toucher LCD LED. Faites toujours appel à votre centre de service ou à un technicien qualifié pour toute réparation.
- Pour des raisons de sécurité, si vous achetez séparément le kit de fixation VESA, assurez-vous que celui-ci est certifié UL, et qu'il peut être remplacé uniquement par un technicien qualifié.

## Package Overview

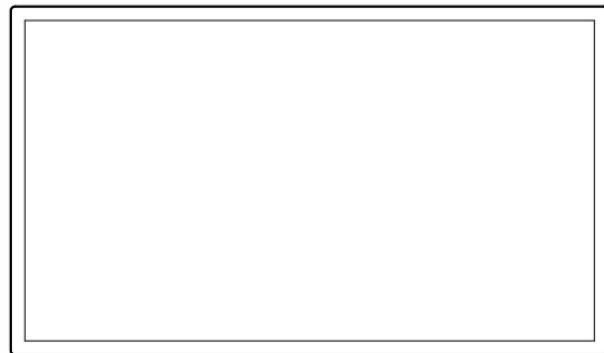


TOUCH LED LCD MONITOR

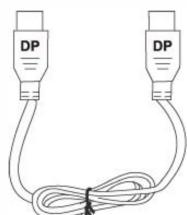

DP Cable




TYPE-C to TYPE-C Cable

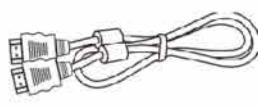

HDMI® Cable



Power Cord

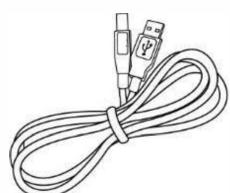


USB-A to TYPE-C Cable




User's Guide

## Front View of the Product

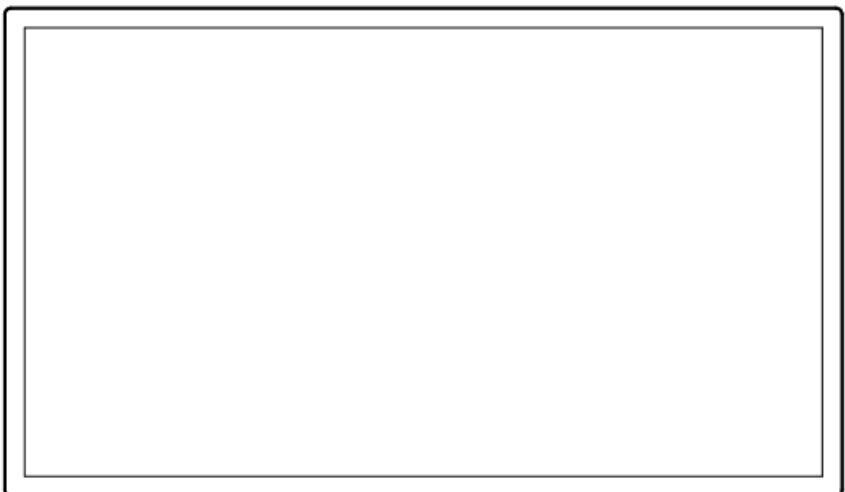

## Rear View of the Product

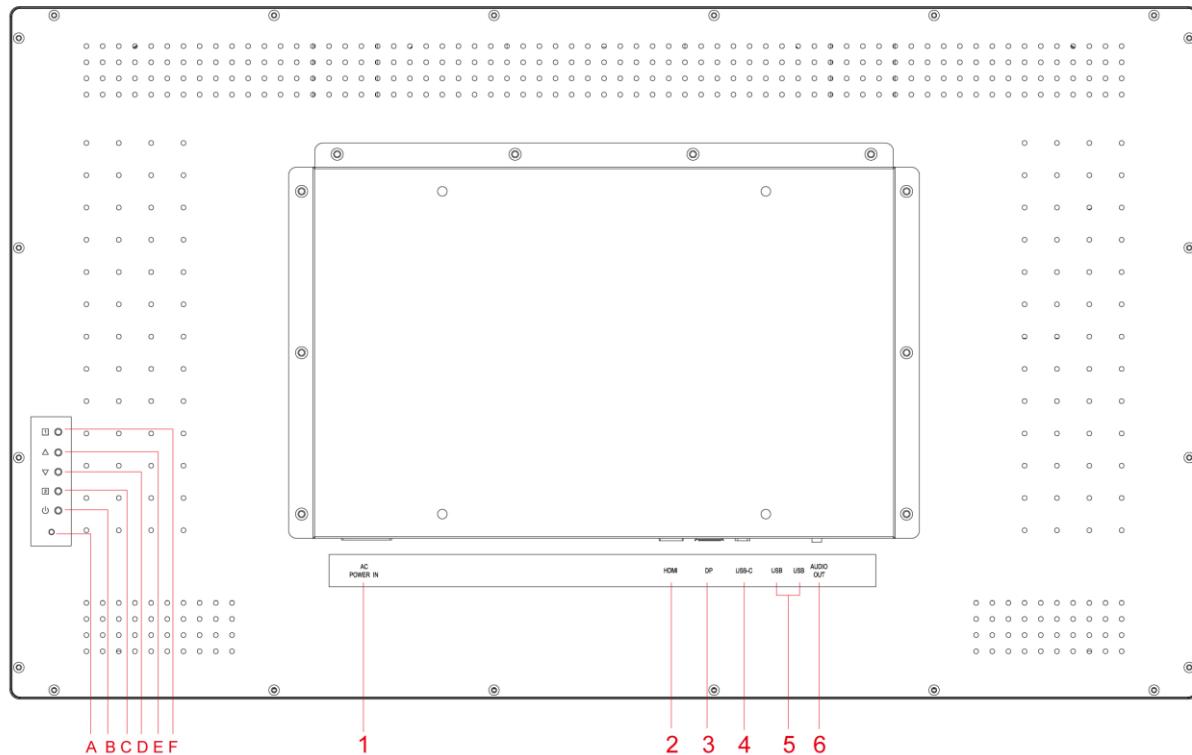

1	Power Input (AC input)
2	HDMI Input
3	DP Input
4	USB-C Input (Output 5V1A)
5	USB3.2 Gen 1 *2 (Output DC 5V1A)
6	Audio Output (EARPHONE)
A	LED Indicator
B	Power On / Off
C	Input select / Enter
D	Brightness / Down
E	Blue Light Reducer / Up
F	Menu / Exit

## Quick Installation

1. Connect either USB-C to USB-C, DP, or HDMI Video Source from the monitor to the computer. If connecting USB-C only, see Fig 1. If connecting DP or HDMI inputs, please also connect the USB-A to TYPE-C Cable, see Fig 2.
2. Connect the power cord to a properly grounded AC outlet, then to the monitor.
3. Power-ON computer and then POWER-ON the monitor.
4. Set the timing mode on your computer. Recommended resolution and refresh rate is 2560x 1440@60Hz.

Figure 1:


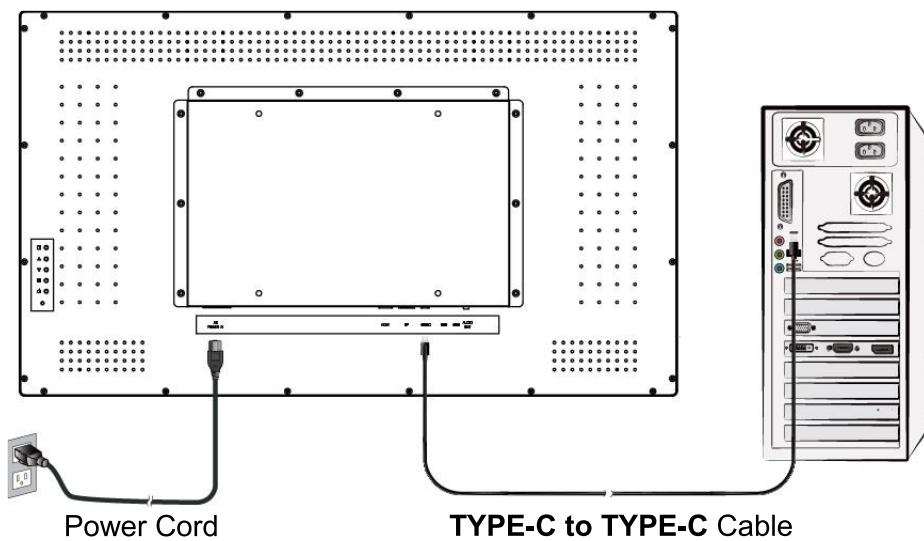


Figure 2:

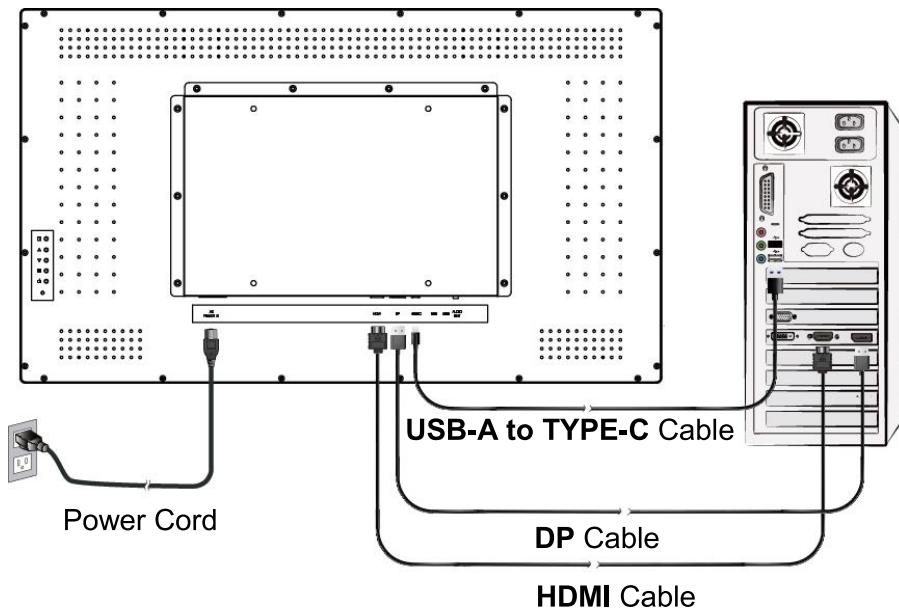

## Basic Operation

### Before using the TOUCH LED LCD MONITOR:

- Connect external equipment properly.
- Insert the power plug, and the power LED indicator will light orange.

### Power On/Off

To turn the Touch LED LCD Monitor on/off:

Press  $\diamond$  button on the back. The power LED indicator light will be blue when the Touch LED LCD Monitor is on.

### Using the OSD Menu

Use OSD menus to adjust settings by using the menu button on the front of the Touch LED LCD Monitor.

[1]	Displays main menu Exits from OSD menu
▼	Select the desired item when in OSD menu
	When not in OSD menu, directly enters Brightness Menu
▲	Select the desired item when in OSD menu
	When not in OSD menu, directly enters Blue Light Reducer Menu
[2]	Selects HDMI, DP or USB-C
	Enter in OSD Menu

## **OSD lock out Function**

When Touch LED LCD Monitor is on and the OSD menu is not activated, the “Lock Out” function can be enabled.

**Option 1:** OSD lock-all 4 buttons are locked except the “POWER” button.

Press and hold the button **[1]** for 5 seconds to lock the OSD buttons.

The Touch LED LCD Monitor will show an “OSD locked” message for 5 seconds and the message will disappear automatically.



OSD LOCKED

Repeat this step to unlock.

**Option 2:** OSD & Power button lock-all 5 buttons including the “POWER” button are locked.

Press and hold the **[2]** button for 5 seconds to lock all 5 buttons.

The Touch LED LCD Monitor will show a “Power button locked” message for 5 seconds and the Message will disappear automatically.



POWER LOCKED

Repeat this step to unlock.

## PT3270Q Calibration/Reset Instructions :

The PT3270Q is available with USB connection. It is Microsoft® 7, 8, 10, 11 HID (Human Interface Device) compatible if you use the USB touch screen interface. No additional software driver is required .Calibration is a simple process and can be invoked by running Tablet PC Settings from control Panel and clicking the Calibrate button.


Click the Reset Button to reset the touchscreen to the factory calibration settings. To reset the existing calibration data, click “Reset” in the Tablet PC settings window.

## OSD Menu



### BRIGHTNESS

- **BRIGHTNESS: Adjust backlight levels**  
Adjust between 0-100.
- **CONTRAST: Adjust contrast levels**  
Adjust between 0-100.
- **PICTURE MODE : Select from preset modes**  
Standard, Movie, Game, Text.
- **DCR: Turn Dynamic Contrast Ratio on or off**  
ON/OFF.
- **OD: Turn Overdrive on or off**  
ON/OFF.

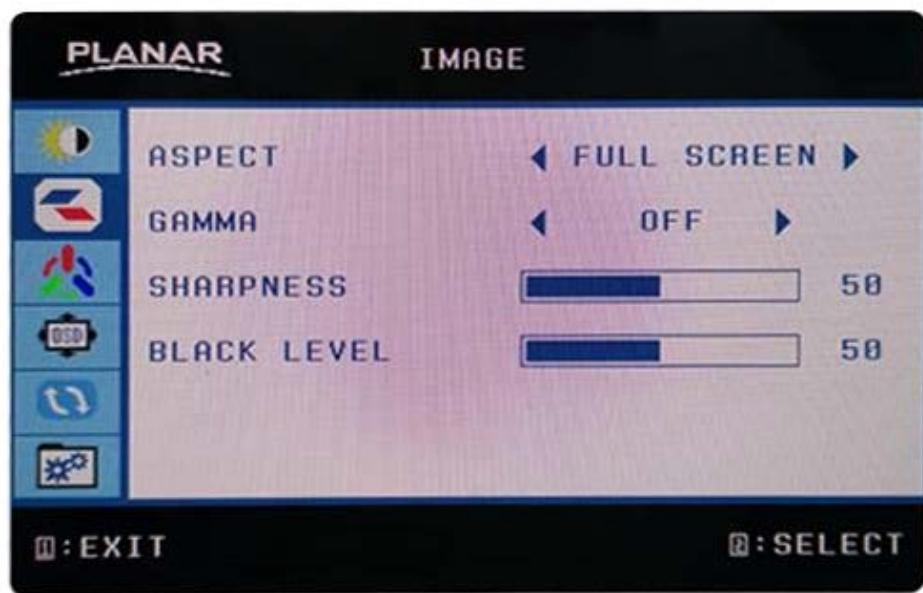

## IMAGE

- **ASPECT:** Select aspect ratio  
FULL SCREEN, 4:3, 5:4, 16:10.
- **GAMMA:**  
OFF, 1.8, 2.0, 2.2, 2.4.
- **SHARPNESS:**  
Adjust between 0-100.
- **BLACK LEVEL:**  
Adjust between 0-100.



## COLOR TEMP

- **COLOR TEMP : Choose color temperature**

User, Warm, Normal, Cool

Under USER, the following colors can be adjusted

- **R : Red**

0-100

- **G : Green**

0-100

- **B : Blue**

0-100


- **LOW BLUE RAY**

Browsing, Low light, Video, Reading



## OSD SETTING

- **LANGUAGE : Choose language**  
English, French, German, Italian, Spanish, Finnish, Japanese, Simplified Chinese, Traditional Chinese
- **OSD H. POS : Adjust horizontal position of OSD**  
0~100
- **OSD V. POS : Adjust vertical position of OSD**  
0~100
- **OSD TIMER : Adjust OSD time out**  
0~60
- **TRANSPARENCY: Adjust OSD transparency**  
0~100
- **ROTATE:**  
0, 90, 180, 270

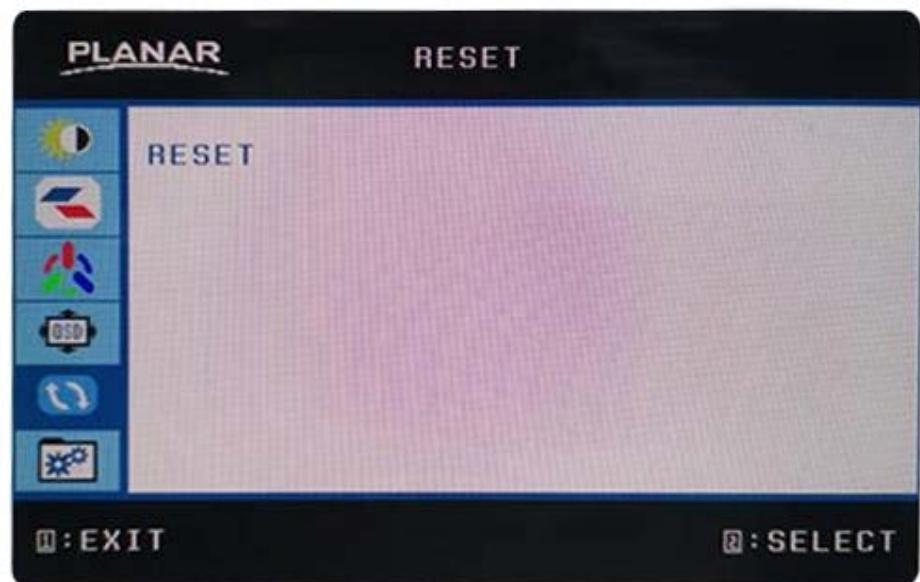

## RESET

- **RESET** : Reset to factory default



## MISC

- **SIGNAL SOURCE** : Select Input source  
HDMI, DP, USB-C
- **MUTE** :  
ON/OFF
- **VOLUME** : Adjusts volume of earphone  
0-100
- **TOUCH MODE** :  
NORMAL, WATER PROOF, GLASS COVER, GLOVES, OFF
  - NORMAL**: Normal mode, support 10-point touch
  - WATER PROOF**: Water mist mode, supports single touch
  - GLASS COVER**: 6mm glass cover mode, support 10-point touch
  - GLOVES**: Glove mode, support 2-point touch when using 2mm thick labor gloves or medical gloves
  - OFF**: Turn off the touch screen

## Supporting Timing Modes

STANDARD	RESOLUTION
VGA	640 x 480 @ 60Hz
MAC	640 x 480 @ 67Hz
VESA	800 x 600 @ 56Hz
VESA	800 x 600 @ 60Hz
VESA	800 x 600 @ 72Hz
VESA	800 x 600 @ 75Hz
MAC	832 x 624 @ 75Hz
VESA	1024 x 768 @ 60Hz
VESA	1024 x 768 @ 70Hz
VESA	1024 x 768 @ 75Hz
VESA	1280 x 720 @ 60Hz
VESA	1280 x 800 @ 60Hz
VESA	1280 x 1024 @ 60Hz
VESA	1280 x 1024 @ 75Hz
VESA	1440 x 900 @ 60Hz
VESA	1440 x 900 @ 75Hz
VESA	1680 x 1050 @ 60Hz
VESA	1920 x 1080 @ 60Hz
VESA	2560 x 1440 @ 60Hz

Note:

HDMI supports 480p, 576p, 720p, and 1080p.

## Technical Information


<b>Panel</b>	31.5" TFT (with LED backlight)	
<b>Power Management</b>	Normal	On: 26 Watts (typical), 55 Watts (maximum)  Standby Mode: < 0.5Watt  Off: < 0.3 Watt
<b>Displayable Resolution</b>	2560x1440@60Hz max	
<b>Pixel Dimension</b>	0.2727(H)x0.2727(V)mm	
<b>Display Color</b>	1.07B	
<b>Active Display Area</b>	698.122mm x 392.688mm	
<b>Temperature</b>	Operating: 5° ~ +40°  Storage: -20° ~ +60°	
<b>Compliance</b>	FCC-B, CE, UL/cUL	
<b>Power</b>	AC 110V~240V	
<b>Speaker</b>	5W x2	
<b>Touch Technology</b>	10 Point Projective Capacitive	
<b>IP Rating</b>	IP65 Support (Front Bezel)	
<b>Glass Coating</b>	Anti-Glare	
<b>Light Transmission</b>	85 ± 5%	
<b>Hardness</b>	6H	
<b>Thickness</b>	4.3 ± 0.3 mm	
<b>OS</b>	HID: Windows 11/10/8/7  Driver: VISTA, XP, 2000, CE, XP Embedded, Linux kernel 2.x.x / 3.x.x / 4.x.x / 5.x.x (32 bit & 64 bit), Apple Mac OS, Android 2.3.X Upwards	

# Wall-Mount Installation Instructions

## Attaching The Optional Wall Mount Arm (not supplied)

Follow these steps to finish installing the wall mounting arm:

1. Place the wall mounting arm onto the back of the Touch LED LCD Monitor. Line up the holes of the arm with the holes in the back of the monitor.
2. Insert the 4 screws into the holes and tighten.
3. Reconnect the cables. Refer to the User's Guide that came with the optional wall mounting arm for instructions on attaching it to the wall.

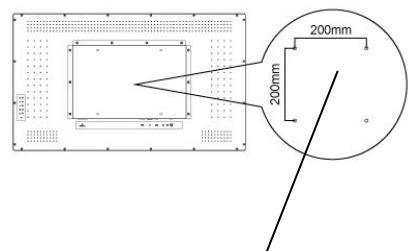

## NOTE

200 mmx200 mm VESA high hole (n=4), M6, pitch =1.0 mm screw mounting kit not included.

## Care and Maintenance

### Care

- Avoid exposing your LED LCD monitor directly to sunlight or other heat source. Place your Touch LED LCD monitor away from the sun to reduce glare.
- Put your Touch LED LCD monitor in a well ventilated area.
- Do not place any heavy things on top of your Touch LED LCD monitor.
- Make certain your Touch LED LCD monitor is installed in a clean and moisture-free area.
- Keep your Touch LED LCD monitor away from magnets, motors, transformers, speakers and TV sets.

### Note

- Move the LED out of the package and take off the plastic bag and Polystyrene Foam.

### Safety Tips

- If smoke, abnormal noise or odor came out from your Touch LED LCD monitor, caution you should remove the power cord immediately and call your service center.
- Si de fumée, un bruit anormal ou une odeur séchappait de votre moniteur, débranchez immédiatement le cordon d'alimentation et appelez votre centre de service.
- Never remove the rear cover of your Touch LED LCD monitor cabinet. The display unit inside contains high-voltage parts and may cause electric shock to human bodies.
- Never try to repair your Touch LED LCD monitor yourself. Always call your service center or a qualified technician to fix it.

## Troubleshooting

### No power

- Make sure A/C power cord is securely connected to the power adapter and the power supply if firmly connected to the Touch LED LCD Monitor.
- Plug another electrical device into the power outlet to verify that the outlet is supplying proper voltage.
- Make sure all signal cables are installed.

### Power on but no screen image

- Make sure the video cable supplied with the Touch LED LCD Monitor is tightly secured to the video output port on back of the computer. If not, tightly secure it.
- Adjust brightness.

### Wrong or abnormal colors

- If any colors (red, green, blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the Touch LED LCD Monitor to another computer.

# Planar Support

## Cables and Accessories

To find cables and accessories for your Planar monitor, touch screen or other Planar products visit our online store at [www.PlanarOnline.com](http://www.PlanarOnline.com).

## Technical Support

Visit Planar at <http://www.planar.com/support> for operations manuals, touchscreen drivers, warranty information and access to Planar's Technical Library for online trouble shooting.

To speak with Planar Customer Support please have your model and serial number available and dial:

### Planar Support

Tel: 1-866-PLANAR1 (866-752-6271) or + 1 503-748-5799 outside the US.

Hours: 24 hours a day, 7 days a week.

Toll or long distance charges may apply.

## European Product Database for Energy Labelling (EPREL)

PT3270Q Registration number: 1335730

# **Planar Systems, Inc.**

## **Customer Service**

24x7 Online Technical Support: <http://www.planar.com/support>

1195 NE Compton Drive, Hillsboro, OR 97006

Tel: 1-866-PLANAR1 (866-752-6271), or + 1 503-748-5799 outside the United States,

Hours: 24 hours a day, 7 days a week

**© 11/2023 Planar Systems, Inc.**

Planar is a registered trademark of Planar Systems, Inc. Other brands and names are the property of their respective owners. Technical information in this document is subject to change without notice.